

POLYESTER DİKME ÇİTÇİTLAR / POLYESTER SEW ON SNAP BUTTON



9425-S

D 25

C-25 Polyester dikme çitçit 25 mm
C-25 Polyester sewing snap 25 mm



9424-S

D 25

D-25 Polyester dikme çitçit 25 mm
D-25 Polyester sewing snap 25 mm



9426-S

D 28

 
K-28 Polyester dikme çitçit 28 mm
K-28 Polyester sewing snap 28 mm



9427-S

D 28

S-28 Polyester dikme çitçit 28 mm
S-28 Polyester sewing snap 28 mm

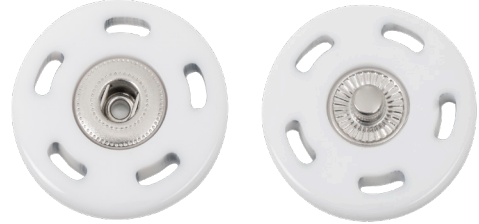

9428-S

D 28

B-28 Polyester dikme çitçit 28 mm
B-28 Polyester sewing snap 28 mm

 
AHŞAP ELDE DİKME ÇİTÇİT / SEW ON SNAP BUTTON WITH WOOD PATTERN



9433-S

W 20

W-20 Ahşap elde dikme çitçit kare 20 mm
W-20 Wood sewing snap button square 20mm

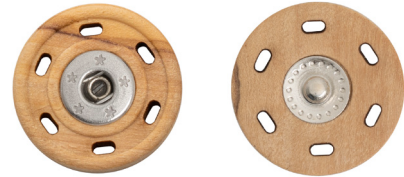

9434-S

W 23

W-23 Ahşap elde dikme çitçit yuvarlak 23 mm
W-23 Wood sewing snap button round 23 mm